



# **EPIC E40FX ENCLOSURE INSTALLATION INSTRUCTIONS**

**Revenge Golf Cart Parts & Accessories**

# 1. Preparing the Materials

---

Open all material packaging bags. Arrange individual parts according to shape and size.



## 2. Pre-install Side Panel



Step 1: Align the front end of the side panel with the rear end of the panel channel, referring to the green box and green arrow in Figure 1. The assembly steps are the same for both sides.




Step 2: Pass the side panel through the panel channel from the rear end to the front end, referring to the green arrow in Figure 2. The assembly steps are the same for both sides.



The assembly steps are the same for both sides

### 3. Pre-install the Rear Panel

Fig.1

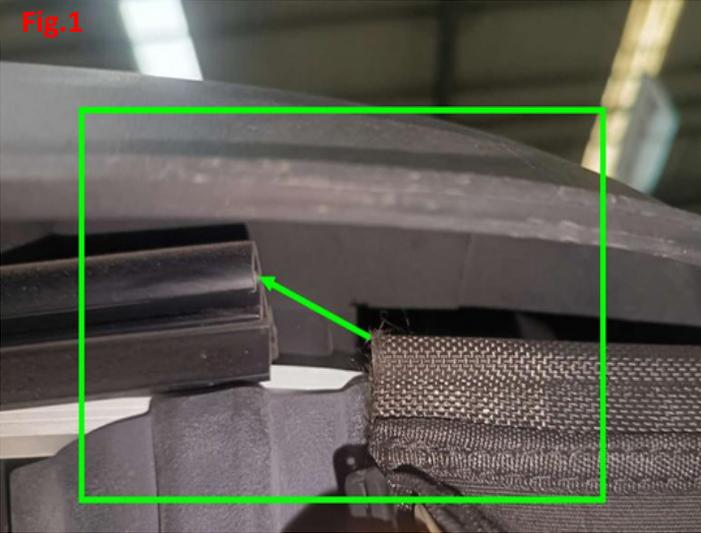

Step 1: Align the front end of the rear panel with the front end of the right panel channel on the vehicle body, referring to the green box and green arrow in Figure 1.

Fig.2




Step 2: Pass the rear panel through the panel channel from the right end to the left end, referring to the green arrow in Figure 2.


Fig.3



## 4. Pre-install Front Panel

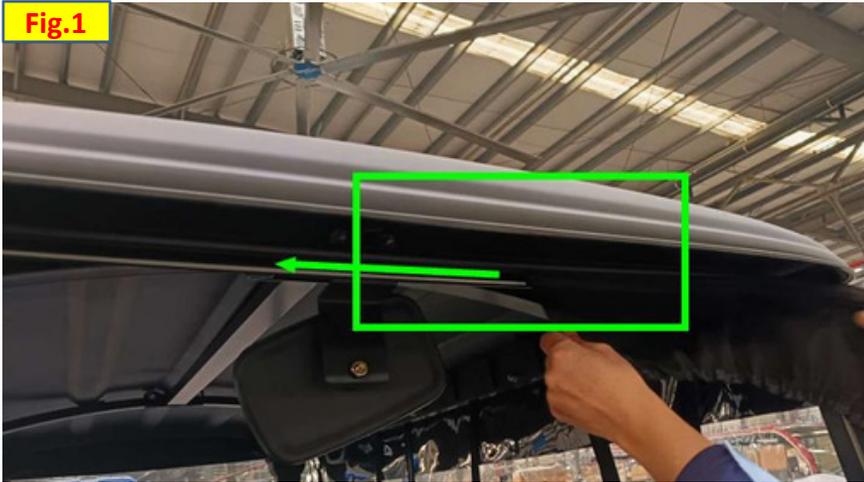

Step 1: Align the front end of the front panel with the right front end of the overhead panel channel, passing it through the left end. Refer to the green box and green arrow in Figure 1.

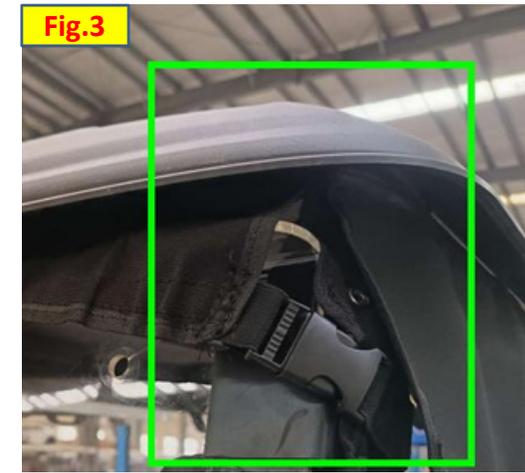

Step 2: Plastic Buckle Assembly: Insert the male front panel clip into the female plastic buckles on the left and right sides of the panel. Refer to the green box and green arrow in Figures 2 and 3.

